

## Northern PWE Lid Installation Instructions

The Northern PWE enclosure varies from standard PWE enclosure systems by including a modified lid and additional gasketing material. This provides the enclosure more protection against wind driven snow and debris. These instructions includes information on differences specific to the Northern PWE model. For general information on PWE system enclosures, refer to the PWE/PME Series Technical Manual, Alpha P/N 031-161-B0, located at [www.alpha.com](http://www.alpha.com).

1. To remove the lid, open the enclosure door. Grasp the underside of the lid from the front and pull up, and slightly to the rear. See Fig. 1.

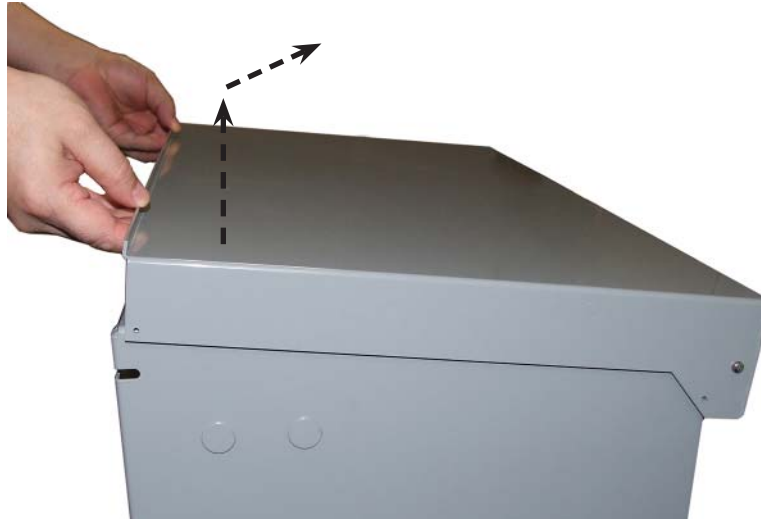


Fig. 1

2. To replace the lid, open the enclosure door. Align the two pins located on the sides of the lid with the slots in the top of the enclosure. Set the lid into the slots, pull slightly forward, Fig. 2. Push down to seat the retaining pin in the front of the lid. See Fig. 3



Fig. 2



Fig. 3

For more information visit [www.alpha.com](http://www.alpha.com)

United States Bellingham, Washington Tel: 360 647 2360 Fax: 360 671 4936  
Canada Burnaby, British Columbia Tel: 604 430 1476 Fax: 604 430 8908